

❖ AD-132 GE

2 CCD Color HDR camera

C3 Camera Suite
Unlimited
Digital
Switchability



- Two Bayer color prism-mounted progressive scan CCDs (1/3")
- Choice of high dynamic range, high frame rate, high S/N, or PIV mode
- 1296 (h) x 966 (v) active pixels per channel
- 3.75 μm square pixels
- RGB 24-bit/32-bit or raw Bayer 12-bit, 10-bit or 8-bit output
- 31 frames per second with full resolution
- Vairable partial scanning with user-definable height and starting line
- Programmable exposure from 11.49 μs to 31.761ms
- GenICam Exposure Time Abs, pulse controlled, and auto shutter modes
- Sequence trigger mode for on-the-fly change of gain, exposure and ROI
- Built-in blemish compensation and shading compensation
- Look-up table (LUT) for gamma adjustment
- Separate AGC (automatic gain control) for each channel
- LVAL synchronous/asynchronous operation (auto-detect)
- Programmable GPIO with opto-isolated inputs and outputs
- Comprehensive control tool and SDK for Windows XP/Vista/7

GiGETM
VISION



Specifications for AD-132 GE

Specifications		AD-132 GE
Sensor	# 1 # 2	1/3" Bayer color IT CCD (ICX447) 1/3" Bayer color IT CCD (ICX447)
Pixel Clock		51.324 MHz
Frame rate full frame		31 frames/sec.
Active area		4.86 (h) x 3.63 (v) mm
Cell size		3.75 (h) x 3.75 (v) μ m
Active pixels		1296 (h) x 966 (v)
Read-out modes	Full Variable partial scan	1296 (h) x 966 (v) 31.484 fps Programmable start line: 0 to 962 Programmable height: 8 to 966 lines
Sensitivity		0.7 Lux (max. gain, shutter off, 50% video)
S/N ratio		>52dB (Green ch., 0 dB gain, 10-bit)
Video output		30/24-bits RGB or 8, 10 or 12-bit raw Bayer
Auto-iris lens video		0.7 Vp-p, w/o sync
Gain	Master gain R/B gain AGC	0 dB to +21 dB -7 dB to +10 dB 0 dB to +21 dB (range adjustable)
Synchronization		Int. X-tal
GPIO Module	Input/output switch Clock generator (one) Pulse generator (four)	Configurable 25-in/14-out switch 12-bit counter based on pixel clock 20-bit counters with programmable length, start point, stop point, repeat
Hardware trigger modes		Edge Pre-select, Pulse Width Control, Reset Continuous, Frame Delay, Sequence, PIV
Electronic shutter	Exposure time Abs	0.4L (11.49 μ s) to 982L (31.761 ms) in 1L steps (28.725 μ s)
	Pulse Width Control	1/13,000 sec. (2.4L) to 2 sec.
	GPIO plus Pulse Width	Fine adjustment via GPIO
	Auto shutter	1/31 to 1/366 sec. (982L to 95L)
White balance		Manual, one-push, continuous, fixed Gain range: -7 dB to +10 dB 2800K to 9000K
LUT/Gamma		8 presets (1.0 to 0.45) or LUT
Functions controlled via GigE Vision interface		Shutter, gain, black level, trigger mode, read-out mode, GPIO setup, ROI (GenlCam mandatory functions)
GigE streaming protocol		Packet size (1476 to 16020 bytes), delayed (frame) read-out, inter-packet delay
Indicators on rear panel		Power/hardware trigger, GigE link/activity
Operating Temperature		-5°C to +45°C
Humidity (operation)		20 to 80% non-condensing
Storage temp./humidity		-25°C to +60°C / 20 to 80% non-condensing
Vibration		3 G (15Hz to 200 Hz XYZ)
Shock		50G
Regulations		CE (EN 61000-6-2, EN-61000-6-3), FCC part 15 class B, RoHS
Power		12-24V DC $\pm$ 10%. 8.0 W typical (full frame @ 12V)
Lens mount		C-mount (Max 4.0 mm thread)*
Dimensions (H x W x L)		55(H) x 55(W) x 98.3(D) mm
Weight		340 g

* Use 3CCD-type lens


High Dynamic Range Output

By altering the shutter/gain settings of the two CCDs and fusing the two synchronized video streams either in-camera or during post-processing, the AD-132GE can provide more than double the dynamic range of standard CCD cameras (up to ~120 dB) but

in a linear fashion that avoids the noise, shutter, and compression issues found in typical CMOS-based logarithmic or LinLog™ high dynamic range cameras. For more information, read the HDR tech note available at www.jai.com

Connector pin-out

DC In / GPIO

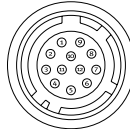

HIROSE HR10A-10R-12PB-01

- Pin 1 Ground
2 +12V DC input
3 OPT In 2 (-)/GND (*)
4 OPT In 2 (+)
5 Auto Iris video out (*)
6 OPT In 1 (-)
7 OPT In 1 (+)
8 OPT Out 1 (-)
9 OPT Out 1 (+)
10 OPT Out 2 (-)
11 OPT Out 2 (+)
12 +12V DC input
Ground

* Select by SW700

GPIO




HIROSE 6-pin

- Pin 1 LVDS In 1 (-)
2 LVDS In 1 (+)
3 TTL In 1 / 75 Ω terminator*
4 TTL Out 1 / open collector*
5 TTL In 2 / 75 Ω terminator*
6 GND

* See manual for details


GigE Vision Interface RJ-45 with locking screws




- | Pin | Pin | Pin | Pin |
|-----|---------|-----|---------|
| 1 | TRD-(+) | 5 | TRD-(2) |
| 2 | TRD-(0) | 6 | TRD-(1) |
| 3 | TRD-(1) | 7 | TRD-(3) |
| 4 | TRD-(2) | 8 | TRD-(3) |

Dimensions


Front view

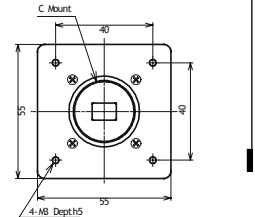


Side view

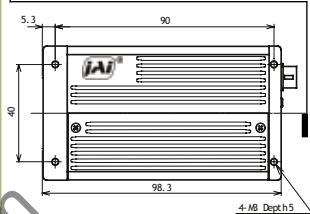


Bottom view

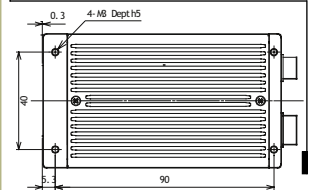

Rear view

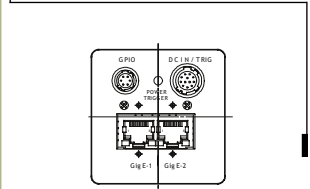

2CCD Prism

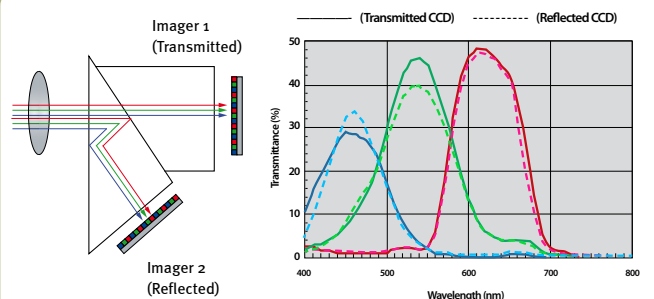

Ordering Information

AD-132GE Digital 2CCD color high dynamic range camera

Europe, Middle East & Africa
Phone +45 4457 8888
Fax +45 4491 3252

Asia Pacific
Phone +81 45 440 0154
Fax +81 45 440 0166

Americas
Phone (Toll-Free) 1 800 445 5444
Phone +1 408 383 0300



See the possibilities

Visit our web site on www.jai.com